

DigiTech
8760 South Sandy Parkway
Sandy, Utah 84070 USA
Tel: (801) 566-8800
Fax: (801) 566-7005

International Distribution

3 Overlook Drive Unit 4
Amherst, New Hampshire
03031 USA
Tel: (603) 672-4244
Fax: (603) 672-4246

Control Seven 18-2157-A




CONTROL
SEVEN
MIDI Controller Pedal

Owner's Manual

Introducing the Control Seven MIDI Controller Pedal

The Control Seven MIDI Controller Pedal is a MIDI program change device, designed to provide a hands-free way to change programs on any MIDI device. The Control Seven transmits program changes 1-128 on MIDI channels 1-16.

Pedal Description

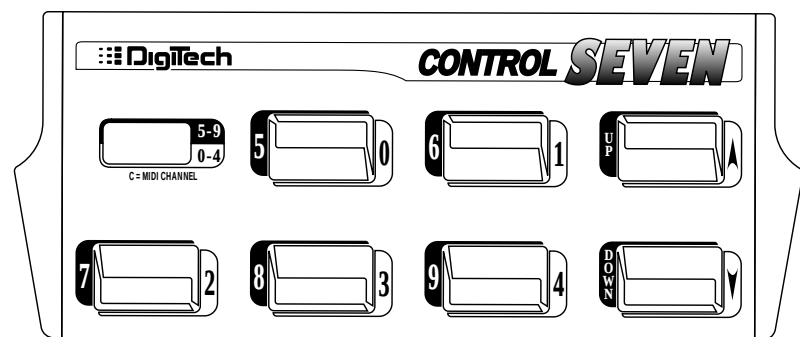

The Program Number/MIDI Channel display is a 4-digit LED display. The pedals perform the program change and bank up/down functions. The back of the unit has a standard 5-pin DIN MIDI jack, and a 3.5mm Power In jack.

Connection



- Plug in a MIDI cable to the MIDI OUT jack, and connect the other end of the cable to the MIDI IN on the device you want to control.
- Plug in the AC power device to the Control Seven, and then to the AC outlet.

Operation

MIDI Channel Select

To select the operating MIDI channel, use the UP or DOWN pedals until a $\square$ appears in the display. Use any numbered pedal to increment the MIDI Channel numbers. Once selected, press either the UP or DOWN pedal to exit MIDI Channel Select. For example, to select MIDI Channel 4, press the UP or DOWN pedal until the display reads $\square$ 1. Press any numbered pedal until the display increments to $\square$ 4, then press either the UP or DOWN pedal. The Control Seven will now transmit on MIDI channel 4.

Program Selection

The Control Seven operates in Banks of ten. The far right LED bars in the display indicate whether you are in the lower 5 or upper 5 programs in that bank. To choose a Bank, press either the UP or DOWN pedal. (MIDI Channel select is between 12 and 0). In a Bank, notice that either the lower bar or upper bar is lit in the display. Therefore, if the display reads 6, and the upper bar is lit, the programs selected will be 65-69.

When a program change message is sent out, the display will flash 4 dashes. To increment or decrement Banks quickly, press and hold the UP or DOWN switch. The numbers will change slowly at first, then scroll rapidly.

On power-up, the Control Seven defaults to MIDI Channel 1/Program Number 0. The Control Seven only transmits program change numbers 1 through 128, numbers 0 and 129 will not be transmitted.

DigiTech Warranty

1. The warranty registration card must be mailed within ten days after purchase date to validate this warranty.
2. DigiTech warrants this product, when used solely within the U.S., to be free from defects in materials and workmanship under normal use and service.
3. DigiTech liability under this warranty is limited to repairing or replacing defective materials that show evidence of defect, provided the product is returned through the original dealer, where all parts and labor will be covered up to a period of one year. The company shall not be liable for any consequential damage as a result of the product's use in any circuit or assembly.
4. Proof-of-purchase is considered to be the burden of the customer.
5. DigiTech reserves the right to make changes in design, make additions to, or improvements upon this product without incurring any obligation to install the same on PRODUCTS PREVIOUSLY MANUFACTURED.
6. The foregoing is in lieu of all other warranties, expressed or implied, and DigiTech neither assumes nor authorizes any person to assume for it any obligation or liability in connection with the sale of this product. In no event shall DigiTech or its dealers be liable for special or consequential damages or for any delay in the performance of this warranty due to causes beyond their control.

DigiTech is a registered trademark of DOD Electronics Corporation.